

FEB 28, 2024

OPEN  ACCESS**DOI:**

[dx.doi.org/10.17504/protocols.io.
dm6gp3p38vzp/v1](https://dx.doi.org/10.17504/protocols.io.dm6gp3p38vzp/v1)

Protocol Citation: Billie Goolsby, Tony Chen, Daniel Shaykevich, Marie-Therese Fischer, Lauren A O'Connell 2024. Optimizing image resolution of wyze camera trap recordings. **protocols.io**
<https://dx.doi.org/10.17504/protocols.io.dm6gp3p38vzp/v1>

MANUSCRIPT CITATION:
<https://doi.org/10.1101/2023.04.17.537238>

License: This is an open access protocol distributed under the terms of the [Creative Commons Attribution License](#), which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

Optimizing image resolution of wyze camera trap recordings

Billie Goolsby¹, Tony Chen¹, Daniel Shaykevich¹, Marie-Therese Fischer¹, Lauren A O'Connell¹

¹Stanford University



Lauren A O'Connell
Stanford University

ABSTRACT

Improving the resolution of Wyze cameras opens up their usability in different contexts, such as observing animals in the laboratory or in field conditions. This protocol provides step-by-step instructions on how to modify the camera resolution such that the user can better focus on a target of interest.

IMAGE ATTRIBUTION

The figure assembly is by Billie Goolsby. The frog illustration is by Lauren O'Connell.

MATERIALS

Ruler

Focal object (anything of interest)

Wyze V3 camera

Razor Blade, single edge, 0.009" (any brand)

Blunt forceps (any brand, but we use Fisherbrand Dissecting Blunt-pointed forceps, CAT#08-887).

Fine tipped forceps (any brand, but we use Dumont #5 Forceps, CAT#11254-20).

Long necked Phillips-Head Screw Driver (any brand, but we use Husky's 2 x 8 inch, CAT# 204663529)

Protocol status: Working
We use this protocol and it's working

Created: Feb 13, 2024

Last Modified: Feb 28, 2024

PROTOCOL integer ID: 95185

Funders Acknowledgement:

National Institutes of Health
Grant ID: DP2HD102042

Rita Allen Foundation
Grant ID: NA

HHMI Gilliam Fellowship
Grant ID: GT15685

New York Stem Cell Foundation
Grant ID: NA

National Institutes of Health
Cellular Molecular Biology
Training Grant
Grant ID: T32GM007276

SAFETY WARNINGS

 This protocol uses razors and forceps. Both are sharp. Use caution when dismantling the camera to not hurt yourself and to not irreparably damage the camera.

ETHICS STATEMENT

We do not benefit at all from Wyze Labs. This research was conducted at Stanford University, which is located on the ancestral and unceded land of the Muwekma Ohlone tribe. We gratefully acknowledge Dr. Michael Hobbs, who brainstormed with BG in the early stages of her PhD how to best detect our frogs. We thank the Wyze community forum, where members and the company together brainstorm new ideas and troubleshoot current technology. We thank Madison Lacey and David Ramirez for their care of our domestic poison frog colony.

BEFORE START INSTRUCTIONS

As with most purchases, camera modifications can invalidate Wyze warranties for their cameras. If you are okay with this risk, please proceed!

Camera Preparation for Modification

- 1** Using the Wyze app, focus your camera on an object that is approximately the same distance as the distance your camera will be positioned from the focal subject in your research. Using a ruler, document this ideal focal distance. It is OK if, at this point, the image on your Wyze app is blurry. If the object is already in ideal resolution, do not proceed with camera modification.
- 2** After documenting the ideal focal distance, unplug the Wyze camera from the power source.
- 3** **Check for an SD card.** Open the rubber cap labeled, "SD card" on the back of the camera. If an SD card is inside of the camera, it needs to be removed. Using either your fingernails or blunt forceps, push the SD card in slightly, so that the push release latch ejects the SD card. Remove the SD card with your fingernails or blunt forceps.



Removal of SD card from Wyze camera. Photo source: <https://support.wyze.com/hc/en-us/articles/360057944152-How-do-I-install-a-microSD-card-in-my-Wyze-Cam-v3>

- 4 Facing the front of the camera, a white border encases a black square. This white border is secured with a double sided adhesive. Using a razor blade, carefully remove the white outer frame of the front of the camera. Cut around the whole frame to detach it from the glue underneath. Lift the white border on all 4 sides of the camera. Keep this white border, as we will add it back when we are finished.



Using gloves and with care, remove the adhesed white border on the front of the camera.

- 5 Once the front cover is removed, find the three small screws holding the housing of the camera together. Using fine tipped forceps, remove the small white foam cylinders in the screw holes. Keep the foam cylinders somewhere, we will add them back at the end of the protocol.




- 6 Using a Phillips long-necked screw driver, reach in and unscrew the three screws. The order of unscrewing is not important. Keep these screws, as we will reuse them at the end of the protocol.




Long necked
Phillips-Head
Screwdriver

Keep screws after
removal

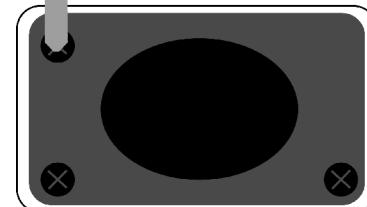


Original screwdriver illustration courtesy of [Timplaru Emil](#) at Vecteezy.com.

- 7 With the razor blade, carefully wedge between the camera housing and the white outer shell. Orient the razor such that the sharp end is facing opposite of the white frame. Push out the entire camera assembly. **Be careful to not damage the orange rubber gasket used for water proofing.**

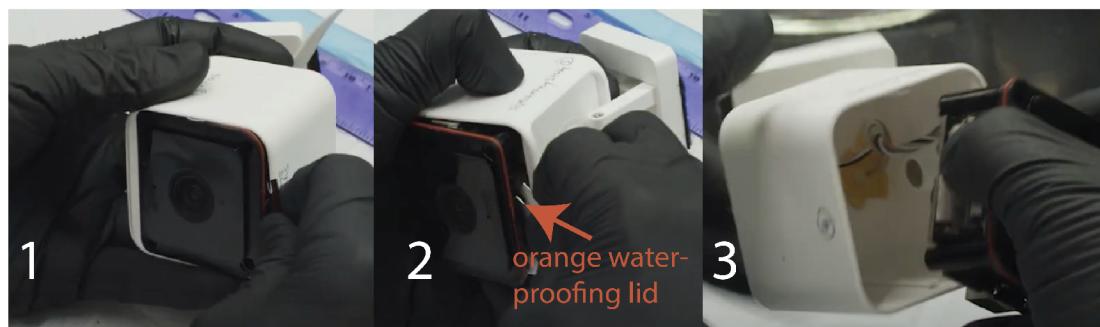


Camera Modification


- 8 Carefully, remove the two ribbon cables that fasten the camera assembly to the white shell casing. The first ribbon cable has 2 wires (white = left), the second ribbon cable has 4 (pink = left).

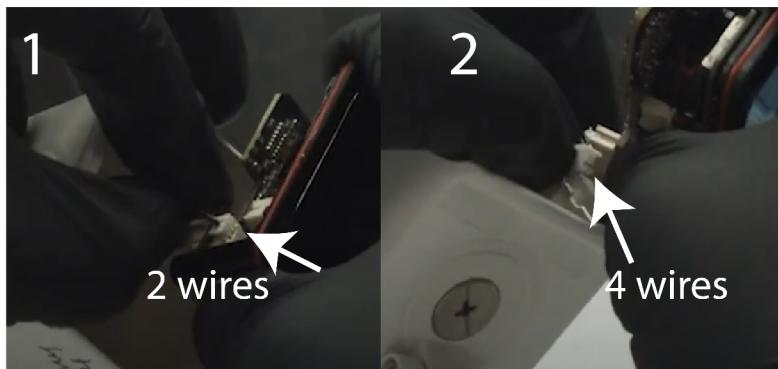

- 9 In the back of the camera assembly, locate the two screws in the center holding the camera lens.

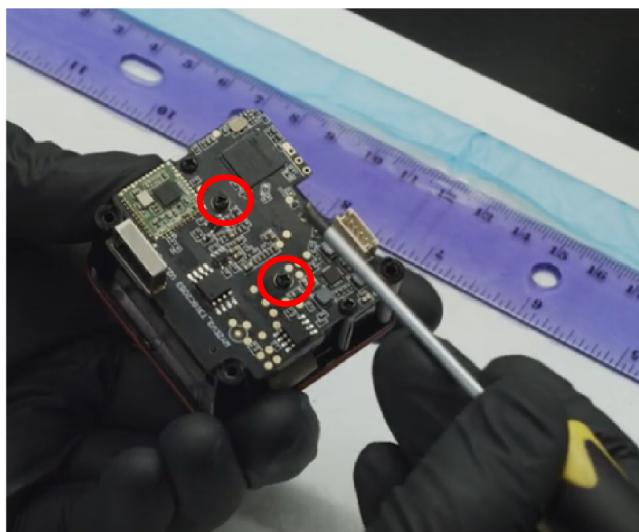

- 10 Using your long necked Phillips screw driver, turn each screw counter clockwise (left) a quarter of a full turn. After turning, push the screw (gently) towards the circuit board. Doing so pushes the lens further away from the circuit board, changing the focus.

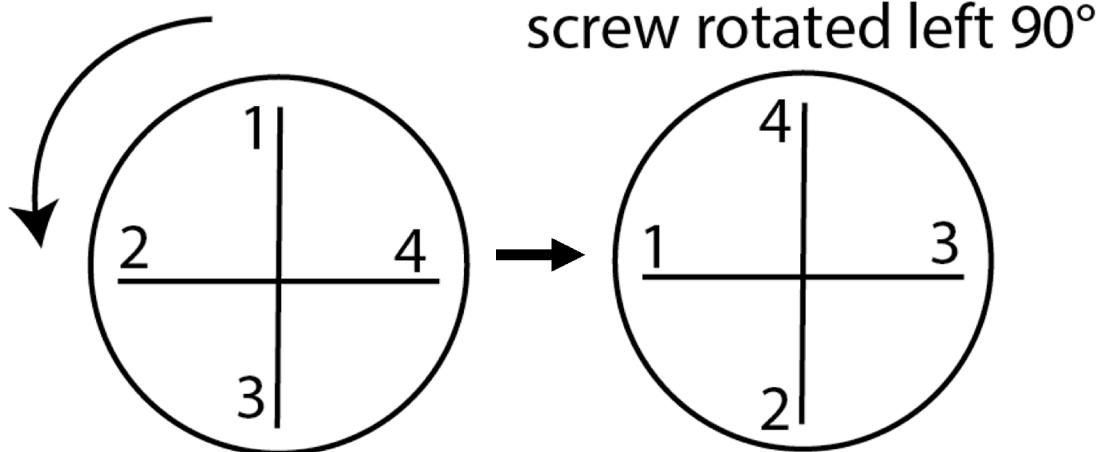

- 11 Reconnect the two ribbon cables. Repower the Wyze camera.
- 12 Check whether the desired focal length has been achieved that you documented in Step 1. If not, repeat step 10. For example, see this comparison below:



Camera Reassembly

- 13 Push the camera assembly back into the housing, aligning it in the correct orientation. The way to ensure you align it correctly is to use the SD card reader on the camera assembly, and align it to the the rubber lid on the outer shell. You can refer to step 3's picture for assistance.

14 Replace the 3 screws removed previously in Step 6.

15 Replace the foam pieces removed previously in Step 5.

16 Add the white border back that was removed previously in Step 4.

Video Guide

17 We also made a video guide. If you'd like captions, please visit the Youtube version of our camera manipulation protocol directly underneath.



<https://www.youtube.com/embed/ktB7ouhepOk?si=e4ssAFBpl2ex-th9>